发行图纸

www.viera-co.com

VI-8620R

2.1 Multimedia Speaker System

SD/MMC CARD

USB DISK

DEAR CUSTOMER
Congratulations on your purchase!
Please read this manual carefully and keep it for future reference

Usage:

Specification:

* P.M.P.O: 1500W
* Channel: 2.1
* Output Power: 5W+3Wx2
* Frequency Reaponse:40Hz- 20kHz
* S/N Ratio:⩾70dB
* Separation:⩾45dB
* Speaker Units:3"+2.75" x 2

Caution:

1. Do not splash or drip liquid on the surface
2. Do not place any objects filled with water over the apparatus.
3. Do not block the ventilation holes.
4. For indoor use only.
5. When using high output signal don't turn the volume to maximum to avoid distortion.

Inside Package:

Subwoofer Speaker	1	pc
Satellite Spaeker	2	pcs
Audio Cable	1	pc
Remote	1	pc
User Manual	1	pc
Guarantee Card	1	pc

Front panel

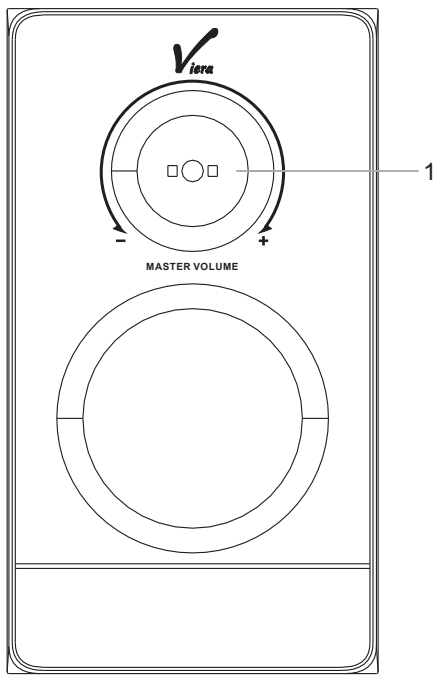

1、To turn the volume up and down.

At the top of the eray

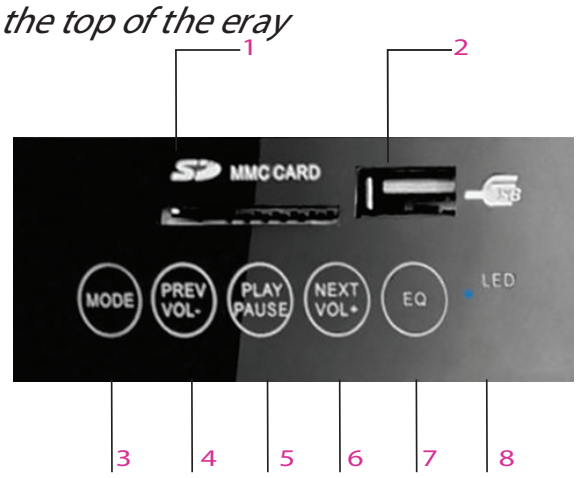

1 SD card socket
2 USB socket
3 “Mode” Button to change USB/SD/DVD signal input
4 "prev" will be "volum- " function if u keep pressing it more than 3 seconds
5 USB/SD pause/Play fuction key
6 "next" will be "volum+" function if u keep pressing it more than 3 seconds
7 “EQ” Button to switch music playing status.
8 Power indicator lamp.

1、it will take a little long time when the capacity of your Usb and sd card more than 8 GB,suggest using the card below 8GB.
2、USBand SD automatic switching Play
3、When using SD card funtion ,it is required to choose SD Card whose memory is more than 512M and also is legal edition.

说明：80g书写纸/A4纸大小/双面单色印刷

发行图纸

System connection diagram

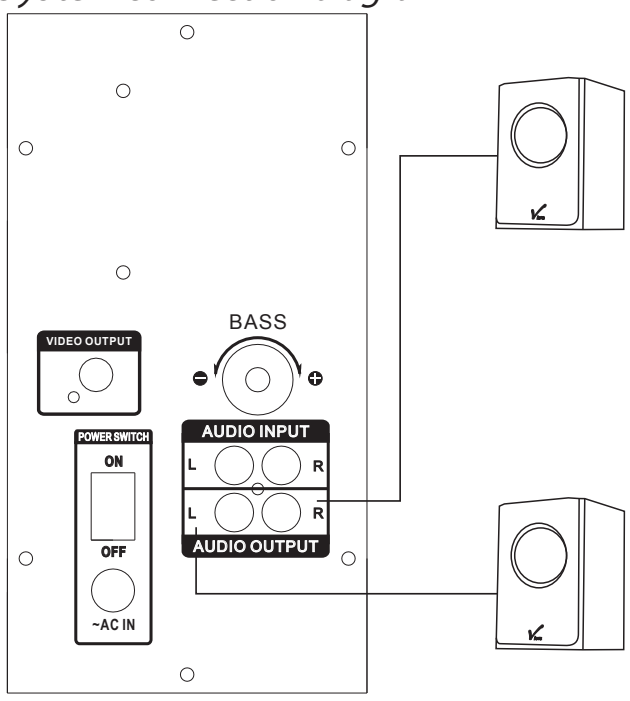

SPEAKER TERMINALS

Connect front speakers, a center speaker, surround speakers to 2.1 speaker output terminals.

NOTE:

* Do not leave magnetic objects near the speakers.

System connection diagram

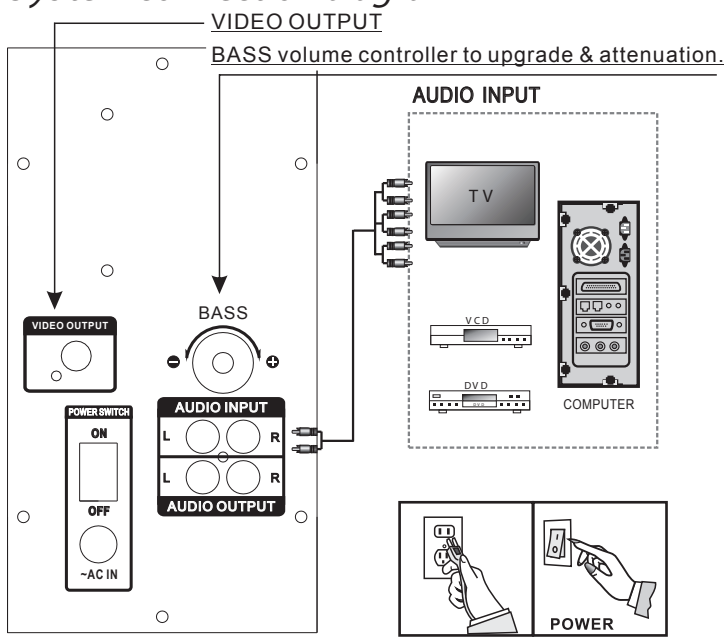

Connecting equipment

Jacks and plugs of the connection cord are colored as follows:Red jacks and plugs:For the left channel of audio si - gnals

NOTE:

Insert the plugs fully into the jacks.Loose connections may produce a humming sound or other noise interference.

Important:

Connect the speakers and all other external equipment and finally connect the AC power cord.

How to use the remote control

1- AUX- - - - - - AUX Switch between
2- USB - - - - - USB switch between
3- SD - - - - - SD switch between
4- ⏮ - - - - - - Previous
5- ⏭ - - - - - - Next
6- ⏯ - - - - - - Play & pause
7- (–) - - - - - To decrease the volume
8- (+) - - - - - To increase the volume
9- EQ - - - - - To switch music playing status
10- Repeat - - - - - To repeat playing
11- Numbers - - - - - To choose the song number

* If the Remote control can not function, it is because the battery of Remote Control has been used up. Thank you.

Positioning the speakers

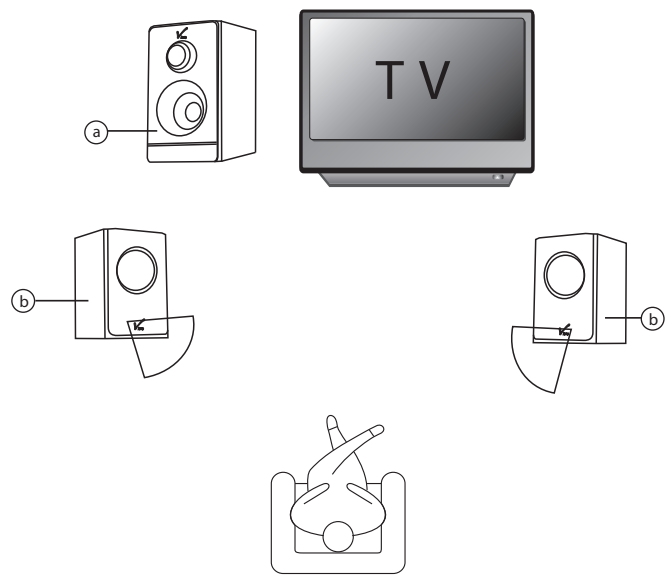

ⓐ Sub-woofer

Place the sub- woofer any place on the floor.
(There is no directionai requirement for the Bass effect.)

ⓑ Speakers

说明：80g书写纸/A4纸大小/双面单色印刷